




Final






Step 1:

You will be making a sliding compartment. Doodle (A) twice and doodle only the outline!

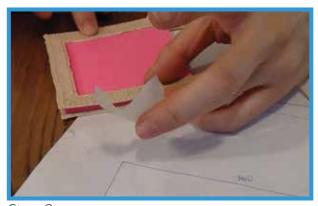


Step 3:

Get the two doodled (A) and face the smooth sides inside. Use post-its to place between the two and stabilise it with masking tape.

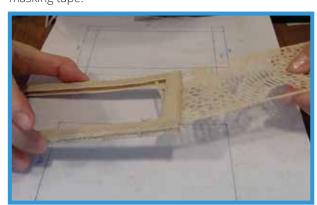

Step 5:

Make sure it slides nice and smoothly!

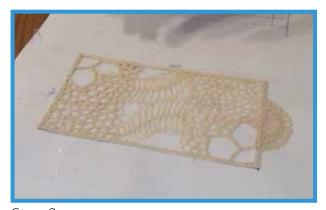

Step 2:

Now doodle (B), this will be the slider. Outline it with thick lines and then doodle your design!



Step 4:


Evenly doodle around the sides.



Step 6:

Doodle 2 more (A)s but this time, fill the whole thing in. Also doodle (C) and fill it up.



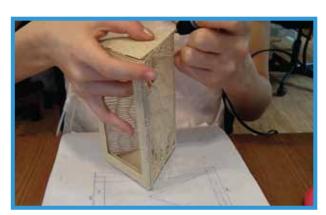

Step 7:

Doodle everything together in a triangular prism.



Step 8: Finally, put the potpourri in!



